



1. Overall arrangement

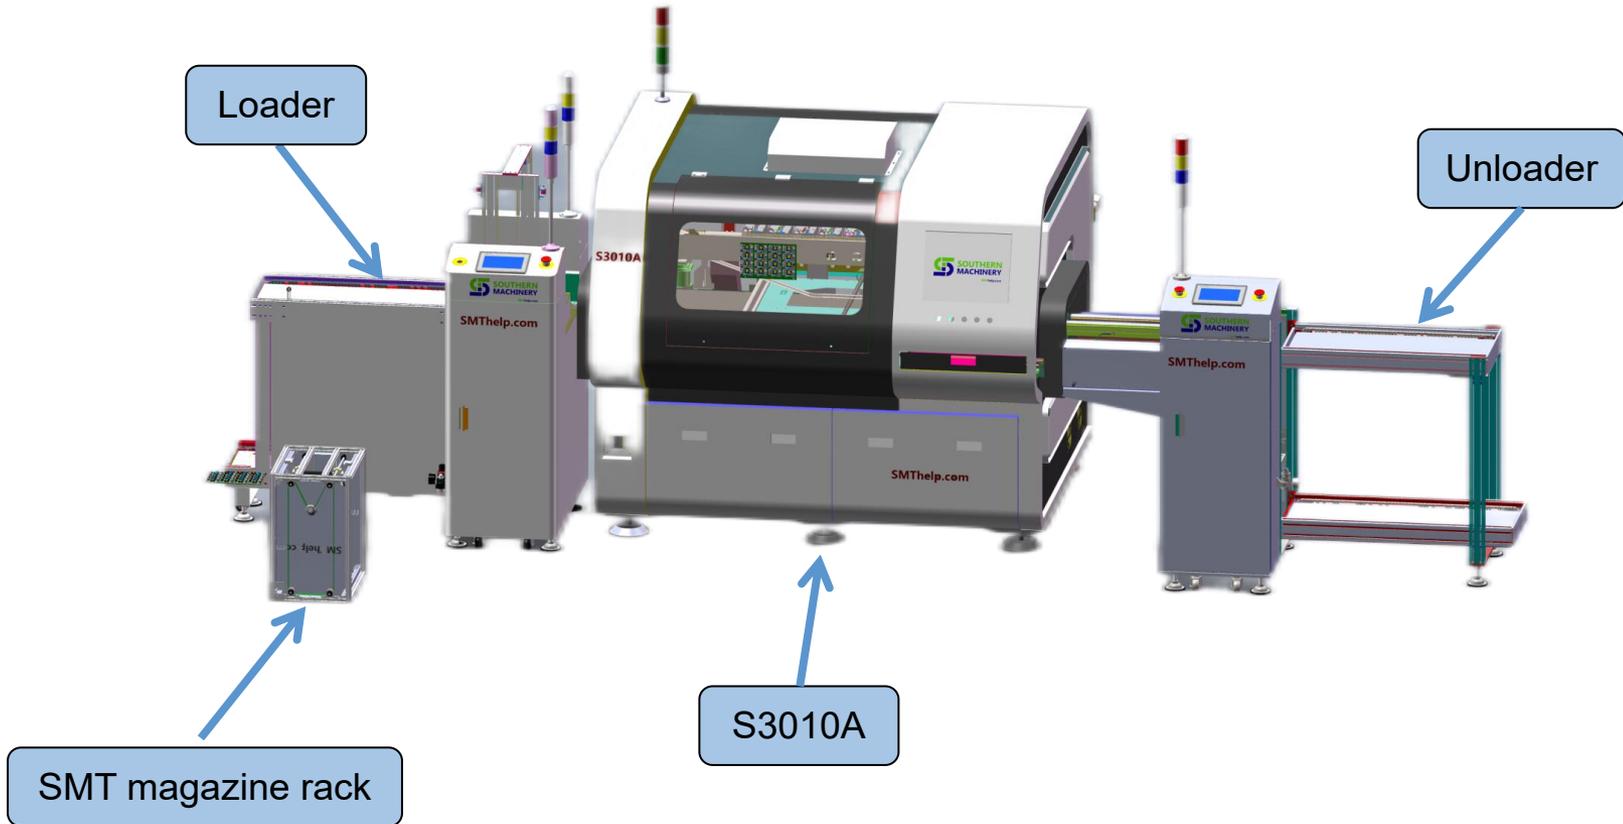

2. Front part

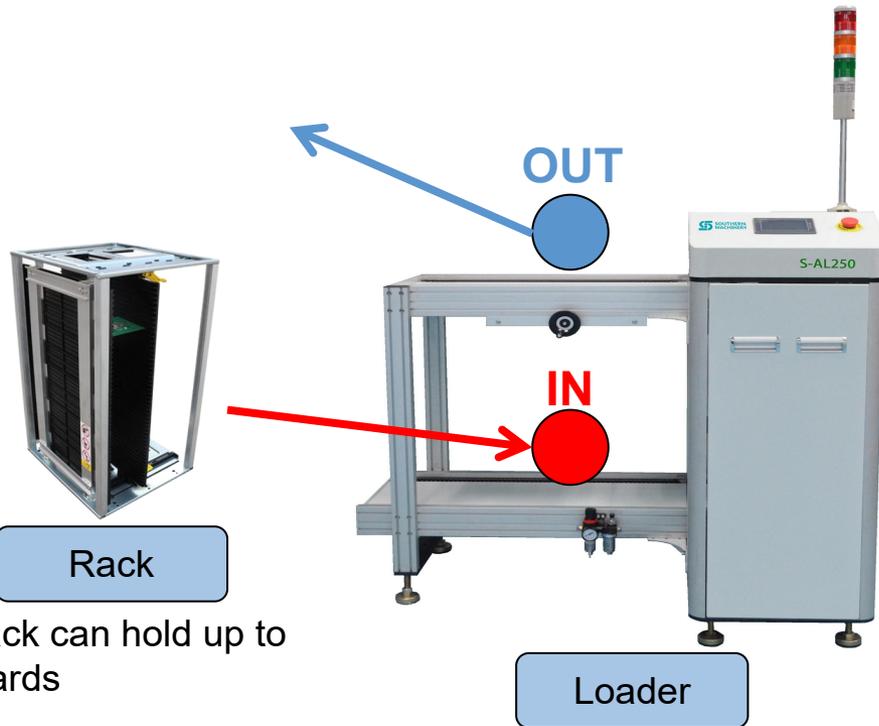

The rack can hold up to 50 boards

The loader automatically sends the board to S3010A, then S3010A will work, and the height and width of the track are matched and the width can be adjusted.



S3010A

The red point is the position of the rack filled with 50 boards, and then the boards will be automatically transported to the S3010A. When all the boards in the rack have been transported, the empty rack will automatically come out from the blue point, and finally by the worker Remove the reload board.


 
3. Back part

The red point is the place where the empty rack is entered. In S3010A, every completed board will automatically enter the empty rack in unload. When the empty rack is stored to 50, it will automatically come out from the blue point and be brought to the next process by the worker.



S3010A

When S3010A completes a board, the S3010A will automatically send the board to unloader, and the height and width of the track are matched and the width can be adjusted.

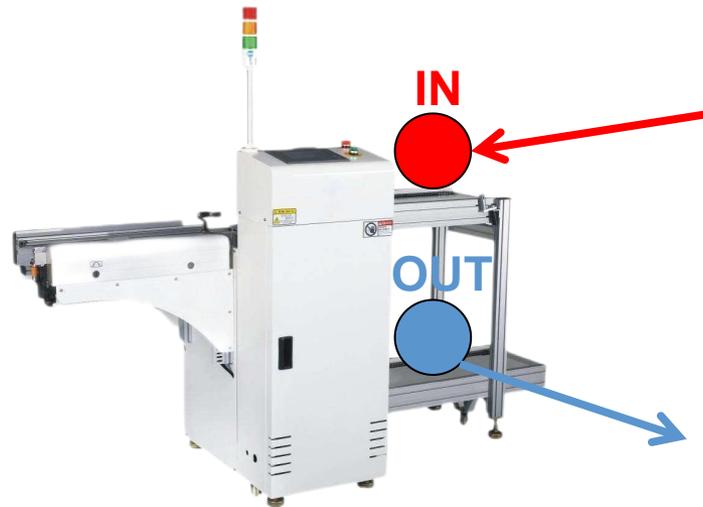

Unloader



Rack

Best After-sales service

- **Worldwide Support**
- **Free Installation/
Training**
- **1 day lead-time (spare
parts)**
- **1 Month customize
solution**



Welcome inquiry

1. Please visit : www.smthelp.com
2. Find us more: <https://www.facebook.com/autoinsertion>
3. Know more our team: <https://cn.linkedin.com/in/smtsupplier>
4. Welcome to our factory in Shenzhen China
5. Google: automatic tin soldering
6. Looking forward to your email: jack@smthelp.com