


Machine Installation

1. Adjust foot cup



After placing the machine firmly, adjust the four foot cups so that the water droplets of the level are in the center.

2. Connect the air pipe interfaces of the upper and lower vacuum cleaners

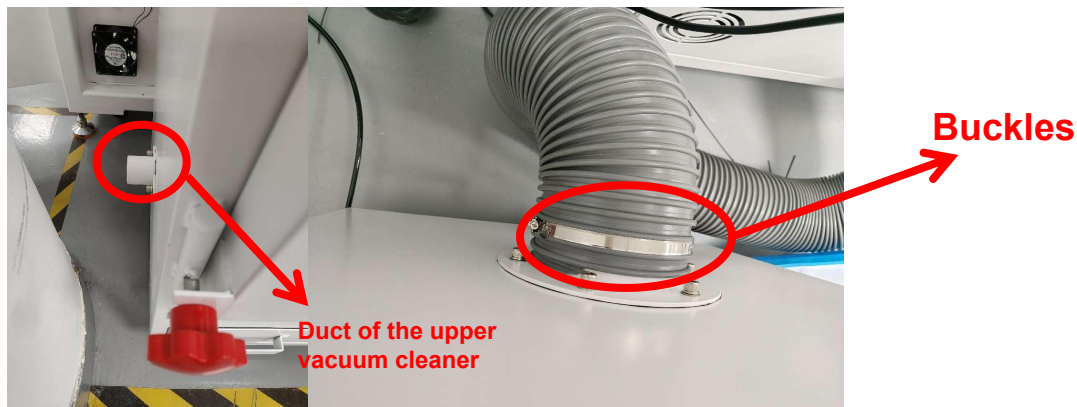

The diameter of the duct of the upper vacuum cleaner is relatively small, and the diameter of the duct of the lower vacuum cleaner is relatively large. After connecting, tighten it with buckles.


Machine Installation

3. Connect the signal cables of the upper and lower vacuum cleaners



Connect the signal cables of the upper and lower vacuum cleaners (there is a fool-proof device)

4. Connect the three wires of the upper and lower vacuum cleaners

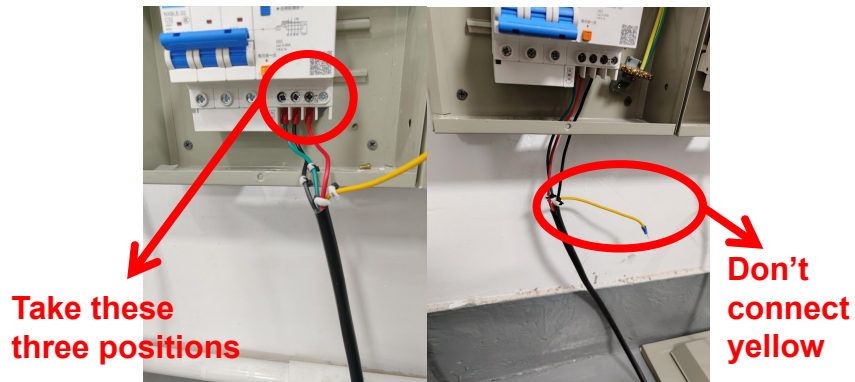

Take these three positions

Don't connect yellow

First pull down the gate, and connect the three-phase power of the two vacuum cleaners to UVW. **Remember not to connect the yellow wire** (if the suction air of the vacuum cleaner is small, switch the position of the three-phase power)

Machine Installation

5. Connect the power and air supply



Plug in the power and air source of the host

6. Check the current wiring and air source and contact the relevant engineer to check. If there is no problem, turn it on.

Please visit

www.smthelp.com

Find us more

<https://www.facebook.com/autoinsertion>

Know more our team

<https://cn.linkedin.com/in/smtsupplier>

Welcome to our factory in Shenzhen China

See more machine working video, please Youtube

[Auto Insertion](#)

Google

Auto+insertion, to get more informations

Looking forward to your email

info@smthelp.com