

Meet the Needs of the SMT Age

**Please read this user manual carefully before running**




## H2 DIP full set conveyor line(2M)

### Installation steps







## Automatic DIP conveyor Installation steps

1. Install the foot cup: Install the shock-proof foot cup on the aluminum material of the support. There are four foot cups for each DIP conveyor line, and the height of the four foot cups is adjusted in the same way.

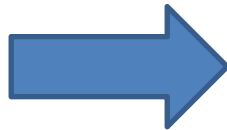

2. Install main table: The aluminum bracket with the foot cup is placed at both ends, and the main plate is placed on the aluminum bracket, and fixed by a triangular plate and a screw, and three triangular plates are used together with the governor box.


H2 DIP full set conveyor line(2M)

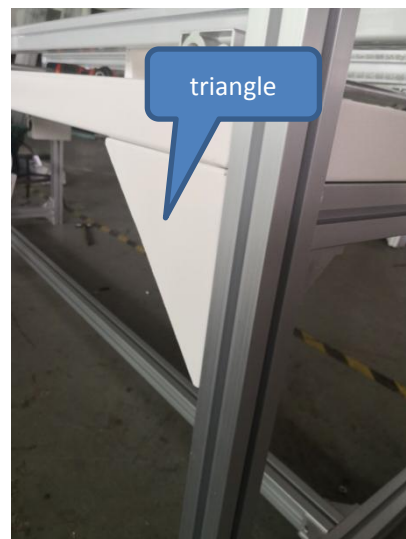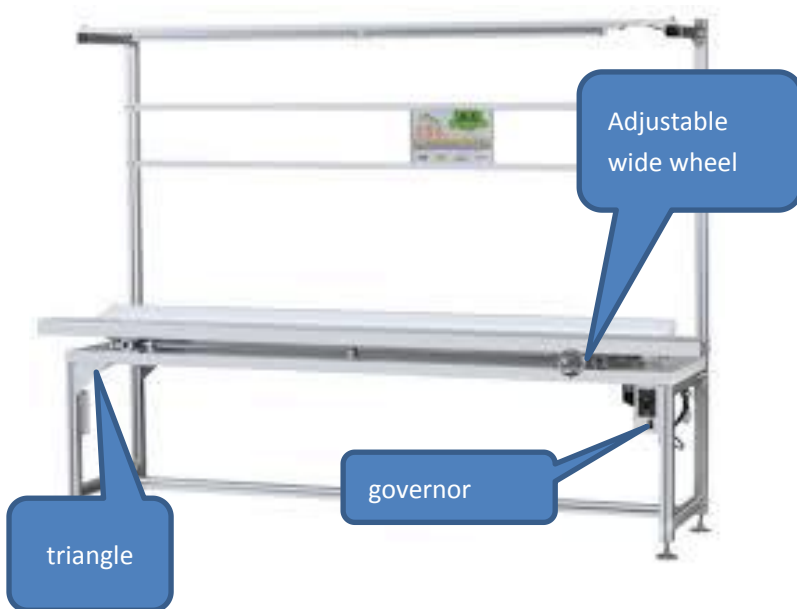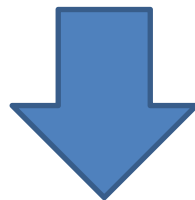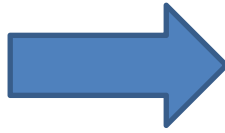

3. Install the foot connecting the aluminum with the lamp



4.Installation of the transmission motor: install the transmission bevel gear onto the transmission motor, and use the rice screw to fix it tightly. Install the motor on the main platform before the motor is installed.Connect the motor power cord to the governor power cord plug.Install the gear guard.

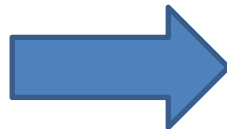



4. Install the fluorescent lamp on the socket of the fluorescent lamp, connect the two fluorescent lamps with connector, and put the fluorescent lamp plug wire into the fluorescent lamp.



5. Installation of process card aluminum: install the process card aluminum between two aluminum brackets, adjust the appropriate height and spacing, so as to adapt to the placement of A4



7. Install aluminum head

8. Use the connector bar to fix the connection between the two plug-in wires.