


CWEF-JE8 Description File

I. Plan

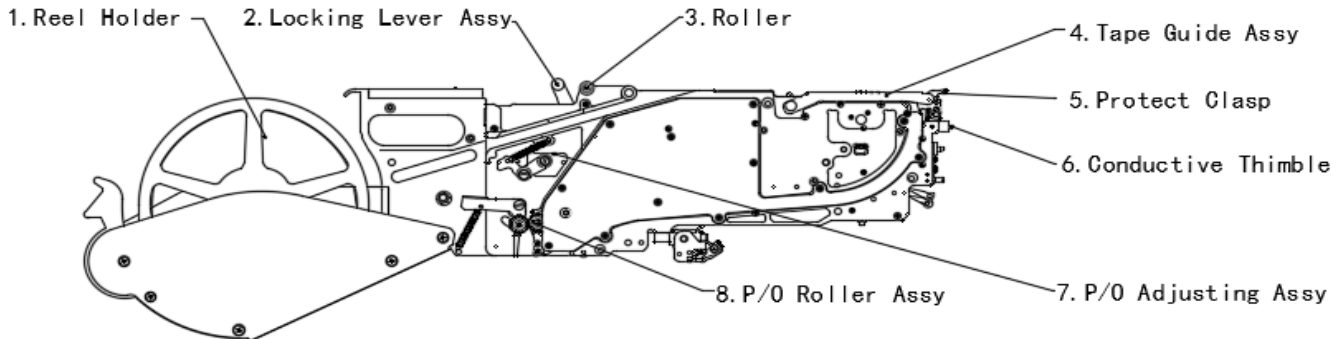

II. Using Step


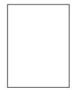





1. Open the locking lever Assy.



2. Installing the feeder to seat.


3. Lock up the feeder.

* Notice: Before locking up the feeder, clear the feeder seat.


III. Key Manual

	LOGO	Wuhan Chuangwei Electric Feeder
	Steps Display	Display Steps: 4→8×4; 2→8×2.
<input type="checkbox"/>	Working Indicator	Feeding Status Display.
	Steps Change	Select Steps: 4→8×4; 2→8×2.
	Forward Key	Click Forward, long press for continues feeding.
	Reset Key	Double click to automationlly return to the origin.
	Reverset Key	Click back, long press for continues back.
	Take Rell Key	Click accept membrane, re-click to stop.


* Fine adjustment: Press  to status light flashing, press , the tape moving forward slowly, un-press to stop.

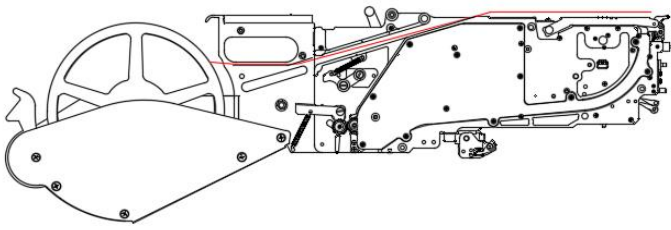IV. Install the tape


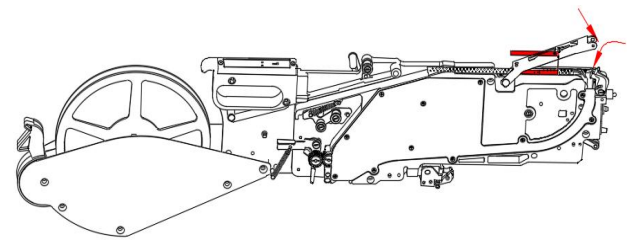
1. Put the tape to reel holder as shown.

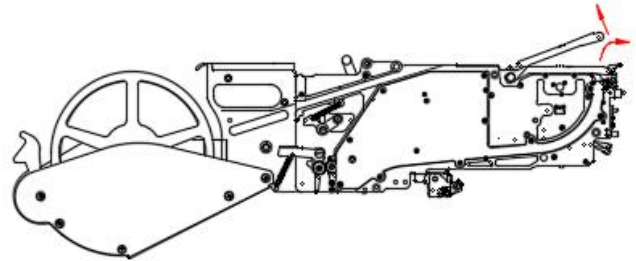


2. Open protect clasp, put the tape to get through tape guide assy.

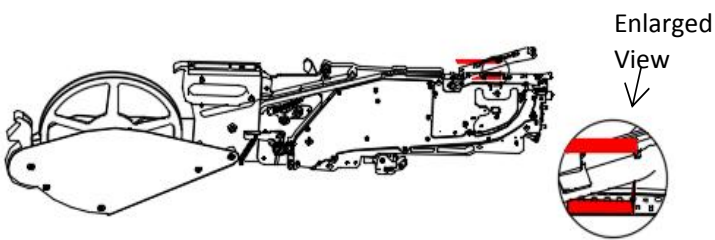


3. Remove the membrane, install the tape well.



4. Pull the membrane and press the tape guide assy, lock the protect clasp.

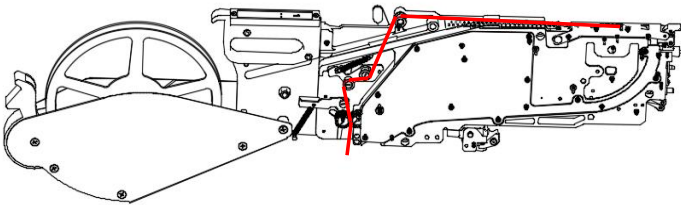

5. Drag the membrane, get through the roller.
Notice: the film must be held tight.

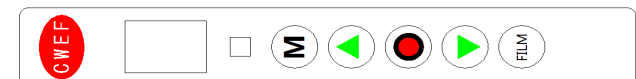

6. Install the feeder, adjusting the right component position.