


## S-SPM01 Solder Paste Mixer for SMT PCB assembly



- 1 , Put the solder paste at 45 degrees ,rotate along the axis direction, solder paste no longer adhere to the Cover.
- 2 With double safety devices to ensure personal security.
- 3 , Remove air bubbles while stirring.
- 4 , Using a dedicated control circuit, fully taking process control in consideration.
- 5 , Proven speed ratio,avoiding too much solder powder and temperature rise impacts solder paste quality.
- 6 , Don' t need to remove cold storage of solder paste out of ice.
- 7 , 500 g solder paste,mixing two cans at the same time.Save time.
- 8 , Mixing process, no need to open the solder paste box.

# S-SPM01 Solder Paste Mixer for SMT PCB assembly

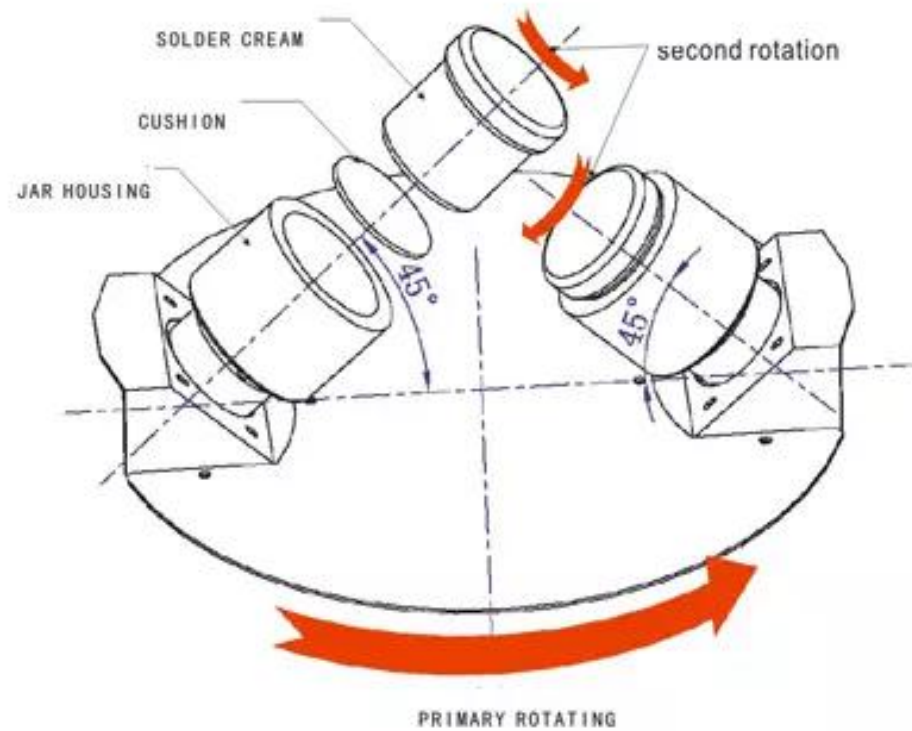

The solder paste is placed in 45 angles, and run around its axis line, so the solder cream will not adhere to its cover



Suitable for all brands of 500g solder paste

# S-SPM01 Solder Paste Mixer for SMT PCB assembly



	<b>Specification</b>
Model	S-PM01
Working Capacity	500g*2 units OR customized
Rotation speed	900/minute
Dimensions	440*440*550mm
Weight	35KG
Time setting	0.1~9.9 Min,each 0.1 min; 10~30 Min,each 1.0 min
Repeat delay error	< 0.1%
Reset method	Power reset
Control methods	electricity latency
Repeat	The time interval is not less than 0.5 s
Output capacity	AC250V 3 A; DC24V 3A (resistance)
Insulation strength	100 M Ω/ 500 DC
Dielectric strength	2.5 KV/min
Power supply	AC 220V, Or AC 110V
Power consumption	MAX300W
Mechanical life	1*1000000
Electrical life	5*100000
Using the environment temperature	-23 °C to 60°C
Using the environment humidity	35-80% RH



## Time setting



For example: "02M00" = 2 Minutes

"11M11" = 11 Minutes plus 11 seconds

# WELCOME INQUIRY

Please visit

[www.smthelp.com](http://www.smthelp.com)

Find us more

<https://www.facebook.com/autoinsertion>

Know more our team

<https://cn.linkedin.com/in/smtsupplier>

Welcome to our factory in Shenzhen China

See more machine working video, please Youtube [Auto Insertion](#)

Google

Auto+insertion, to get more informations

Looking forward to your email

[info@smthelp.com](mailto:info@smthelp.com)